

# **MODEL 8492**

### Installation Instructions

Hardware Included: Tools Needed: Phillips Head Screwdriver 1/8" Drill Bit (20) 10-11 Screws (1) Bumper (1) Track Guard MOUNT PER TRAY INSTRUCTIONS DRILL 1/8" DIA. x 5/8" DEEP PILOT HOLES



## **MODEL 8495** Installation Instructions

### Hardware Included:


- (4) Acorn Nuts
- (4) Screws
- (4) Anti-Slip Keyboard Pads
- (1) Mouse Pad \*
- (1) Mouse Catcher \*
- \* only with Mouse Set

### LEFT HAND MOUSE

Tools Needed:


Wrench


Allen Wrench

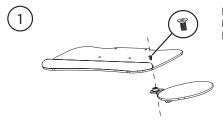

REMOVE. MAY BE ON TOP or BOTTOM DEPENDING ON TRAY MODEL.


**Phillips Head Screwdriver** 



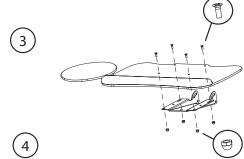

RE-ASSEMBLE MOUSE PAD AND APPROPRIATE MOUSE FENCE





### RIGHT HAND MOUSE

